



STEP 1

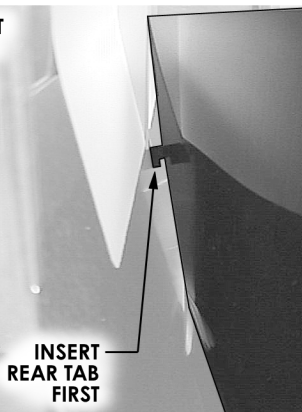

STEP 2

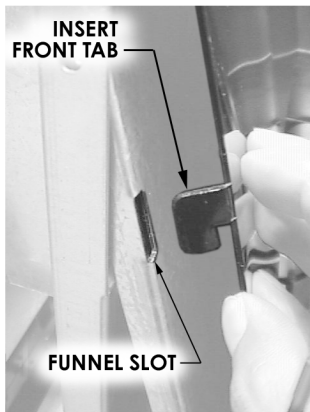

STEP 3



STEP 4

# FILLER (P/N 4211816)

FOR USE WITH 16.9 OZ WATER BOTTLES

## FRONT COLUMN INSTALLATION:

1. Locate funnel slots.
2. Insert Filler rear tab.
3. Insert Filler front tab.
4. Push in and slide down.

## REAR COLUMN INSTALLATION:

1. Remove Center Filler.
2. Locate funnel slots.
3. Remove Rear Product Retainer and place it out of the way to the right.
4. Insert Filler rear tab.
5. Insert Filler front tab.
6. Push in and slide down.
7. Re-install Center Filler and Rear Product Retainer.