

# KIT NO. 1216062.034 - INSTALLATION INSTRUCTIONS

## 250 ML REAR SPACER KIT



### USE THIS KIT FOR CB700, CB300 & COMBO:


To add the functionality of being able to vend 250 ml bottles from a rear column of the vend rack.

### TOOLS NEEDED:

- Needle Nose Pliers

### KIT CONTENTS:

PART NUMBER	QTY	DESCRIPTION
4212988.001	1	Instructions, 250ml Rear Spacer Kit
1216258	3	Common Spacer
1216263.001	1	Funnel Spacer, Rear
4212931	4	Mounting Hook
4210183.001	4	Funnel Slide, Large (6.38 x 6.25)
4210183.002	1	Funnel Slide, Small (1 x 3.12)
4213090.000309	1	250 ml Filler (Combo/CB700)
4213096.000309	1	250 ml Filler (CB300)
4202255	5.25"	1/4x3/4 Foam
4208243	5.25"	1x1 Foam

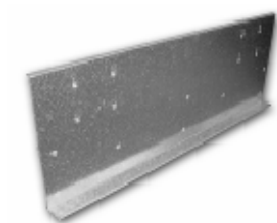

Common Spacer



Funnel Spacer, Rear



Mounting Hook



Funnel Slides



Filler (CB300)



Filler (Combo/CB700)



1/4x3/4 Foam




1x1 Foam


### SAFETY & WARNING

Always turn OFF power before servicing.


- 1 Unlatch and open the Product Retainer (door).

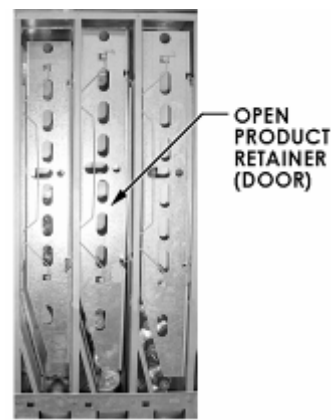

- 2 Go to the rear column of the vend rack. Install two (2) Mounting Hooks (4212931) on left side. One at top and one at bottom.

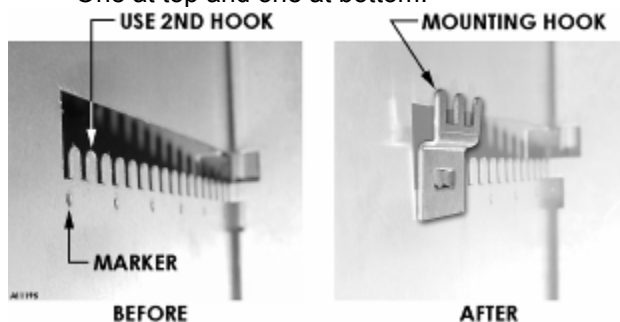

MOUNTING HOOK (LEFT TOP)

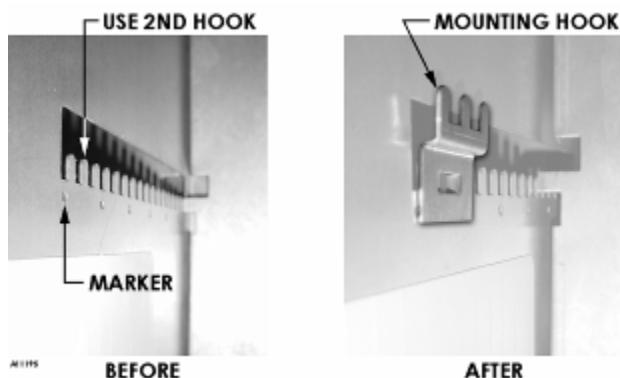


MOUNTING HOOK (LEFT BOTTOM)

# KIT NO. 1216062.034 - INSTALLATION INSTRUCTIONS

## 250 ML REAR SPACER KIT




- 3** Install Funnel Spacer (1216263) on the left bottom inside wall, then install Common Spacer on the left top inside wall.

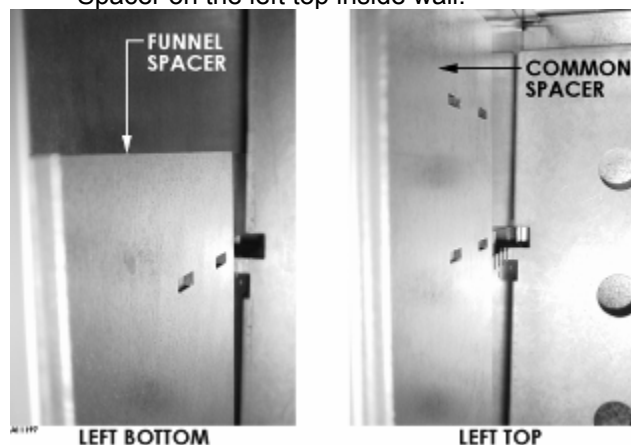


**INSTALL LEFT SPACERS**

- 4** Install Large Funnel Slide (6.37 x 6.25) between Common Spacer and Funnel Spacer, then install another large Funnel Slide just slightly below the first one.

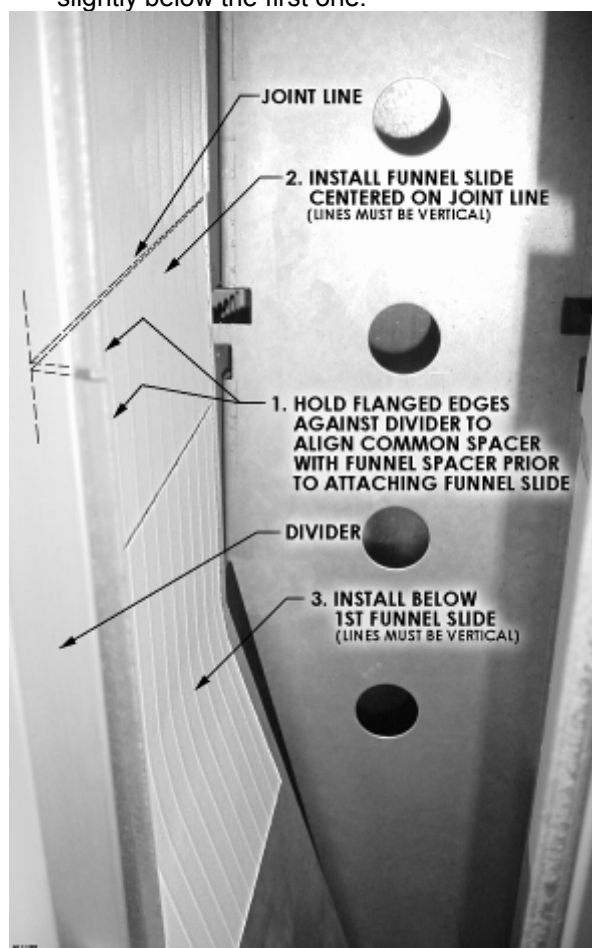


**LEFT FUNNEL SLIDES**

- 5** Go to rear column of vend rack and install two (2) Mounting Hooks (4212931) on right side. One at top and one at the bottom.

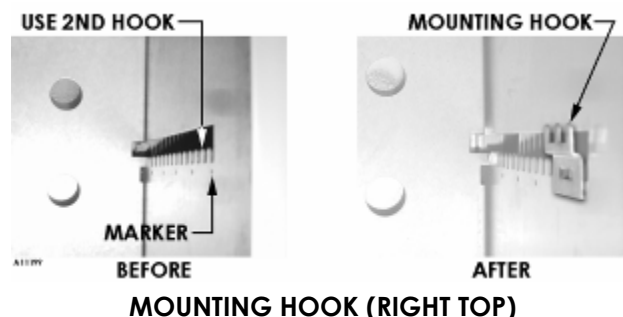


**MOUNTING HOOK (RIGHT TOP)**

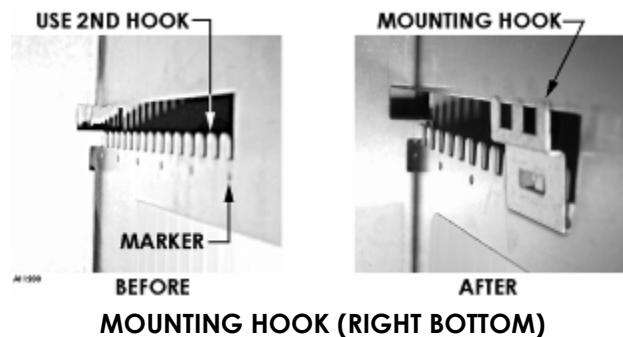

**MOUNTING HOOK (RIGHT BOTTOM)**

- 6** Install two (2) Common Spacers on right inside wall. One at bottom and then one at top.

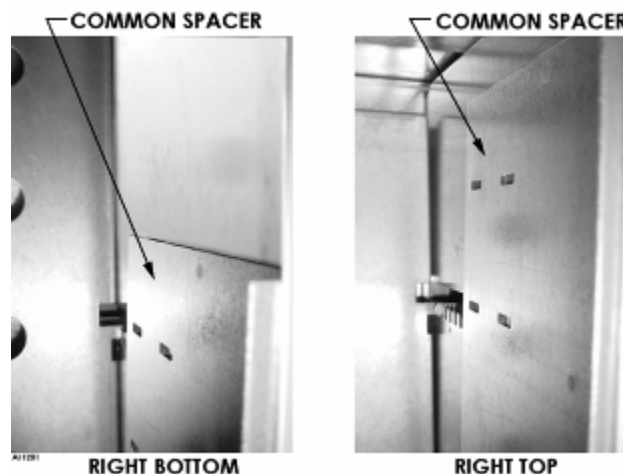


**RIGHT SIDE COMMON SPACERS**

# KIT NO. 1216062.034 - INSTALLATION INSTRUCTIONS

## 250 ML REAR SPACER KIT



- 7** Install large (6.38 x 6.25) Funnel Slide between both Common Spacers, then install another large Funnel Slide just slightly below the first one.

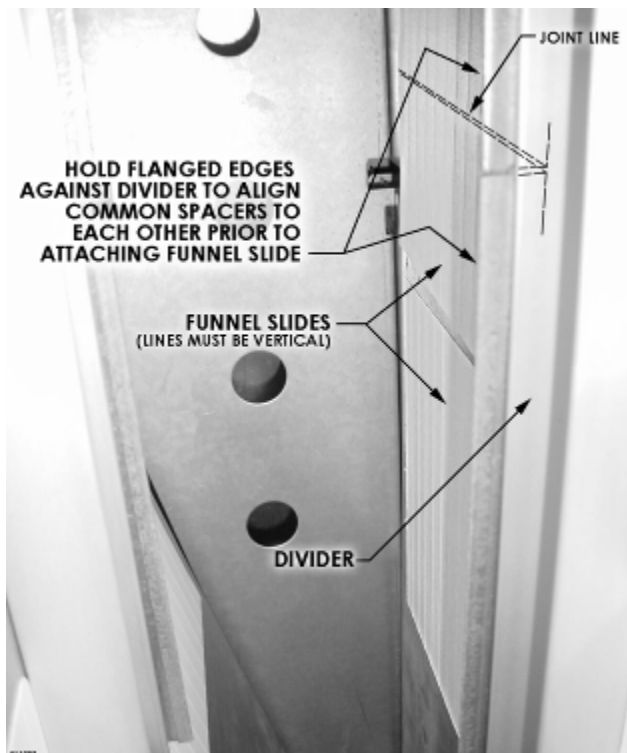


RIGHT FUNNEL SLIDES

- 8** Install small (1 x 3.12) Funnel Slide on the inside edge of the Center Filler.



SMALL FUNNEL SLIDE (FRONT VIEW)

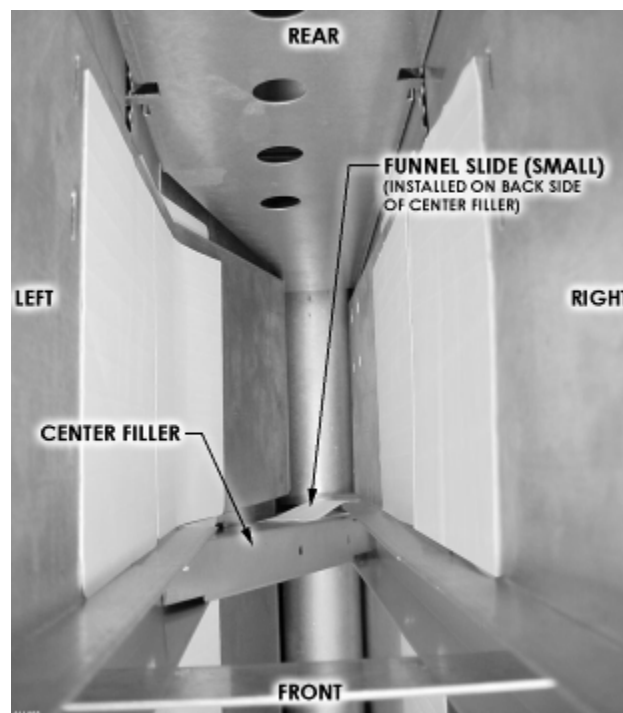

SMALL FUNNEL SLIDE (TOP INSIDE VIEW)

- 9** Close the Product Retainer (door).  
If **CB300**, go to step 10  
If **Combo** or **CB700**, go to step 11

# KIT NO. 1216062.034 - INSTALLATION INSTRUCTIONS

## 250 ML REAR SPACER KIT




### 10 INSTALL FILLERS ON CB300 PRODUCT DISPLAY.

- 10a** Unlatch and open inner door. Place product inside Filler. Slide Filler and product into the matching selection letter slot of the product display.



- 10b** Rotate the product if product markings are not correctly shown.

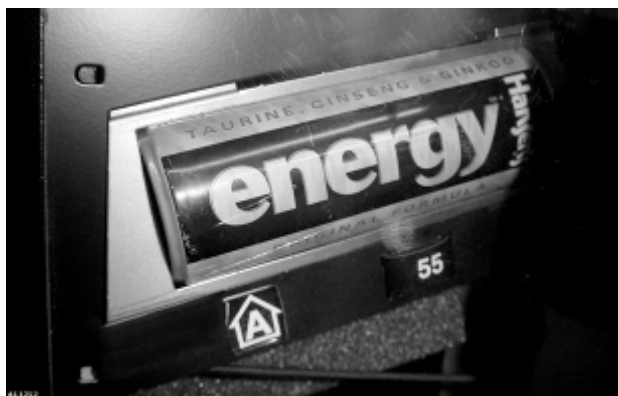

### 11 INSTALL FILLERS ON COMBO OR CB700 PRODUCT DISPLAY.

- 11a** Install 1/4"x3/4" Foam to Filler as shown.

Only for Combo: Install additional 1"x1" Foam on Filler. The additional foam is not necessary for CB700.



- 11b** Slide product inside Filler with brand markings facing the customer.




# KIT NO. 1216062.034 - INSTALLATION INSTRUCTIONS

## 250 ML REAR SPACER KIT



- 11c** Open inner door. Gently pull open the product display back cover and slide the product and Filler into the product display slot.

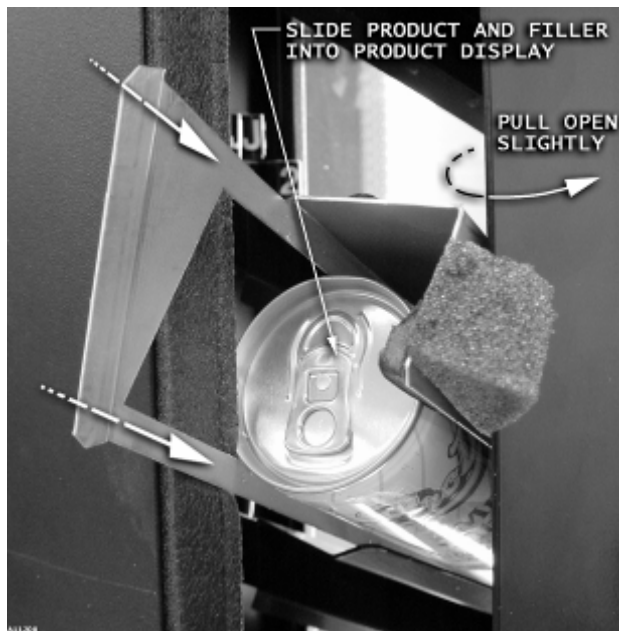

- 11d** Place product and filler deep inside the display slot.



- 11e** Rotate the product if product markings are not correctly shown.

