


Alpine Elevator

Installing the Screen Filter iVend Lens

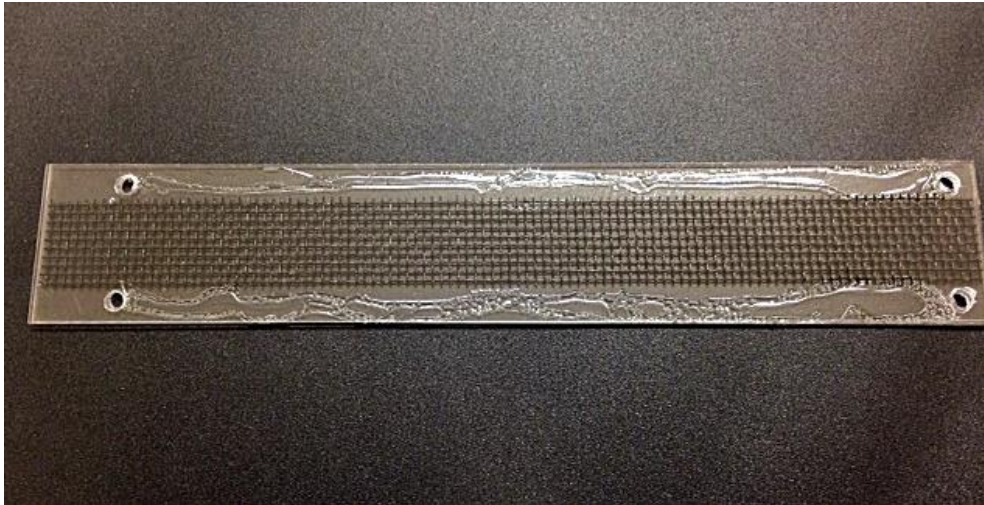


Purpose:

Increases product detection sensitivity
overcoming issues relating to smaller items
with highly reflective packaging

1) Switch OFF machine




2) Disconnect harness to Elevator Motor

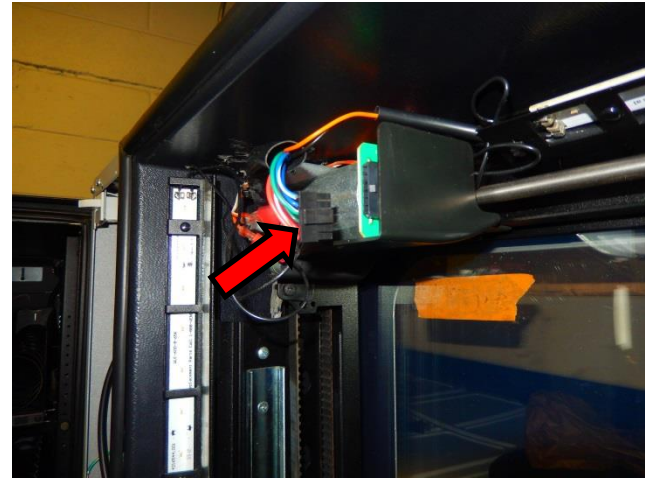


3) Manually raise elevator to comfortable working height




4) Using a 5/16" nut driver remove the 2 Domed nuts shown

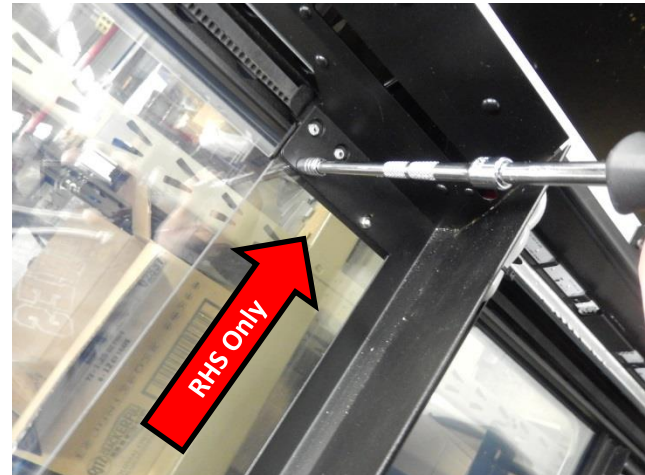

5) Remove the outer 2 x 4215561.036 3/16" Snap Rivets & discard

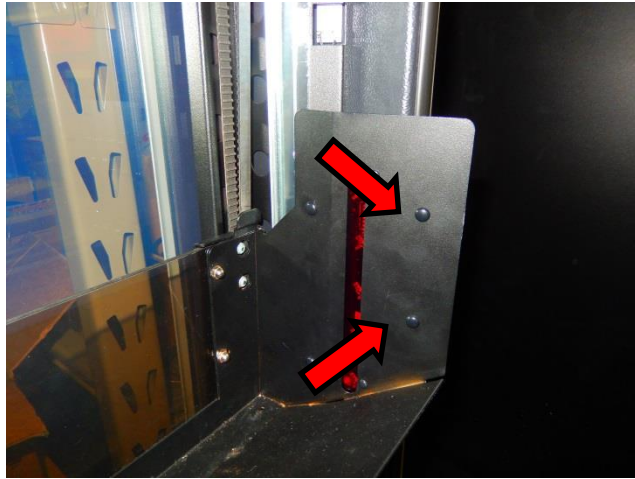

6) Gently pull bucket/plexiglass panel away from mounts to access the 2 rear Snap Rivets, remove them & discard

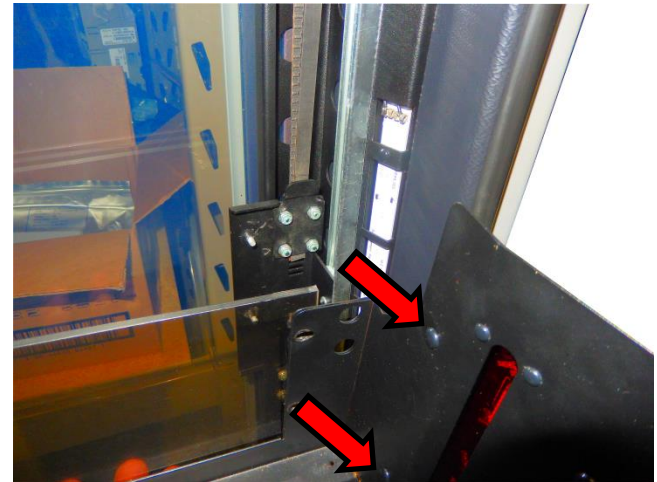

7) Allow the iVend enclosure to hang loose whilst removing the existing Red Lens.

Remove the 4 x 4215561.015 1/8" Snap Rivets retaining the lens. Discard the used Snap Rivets




8) Mount & secure the new Filter Screen Lens with the 4 new 4215561.015 1/8" Snap Rivets provided



9) Refit the iVend enclosure using the 4 new 4215561.036 3/16" Snap Rivets provided



10) Reconnect the Elevator Motor harness

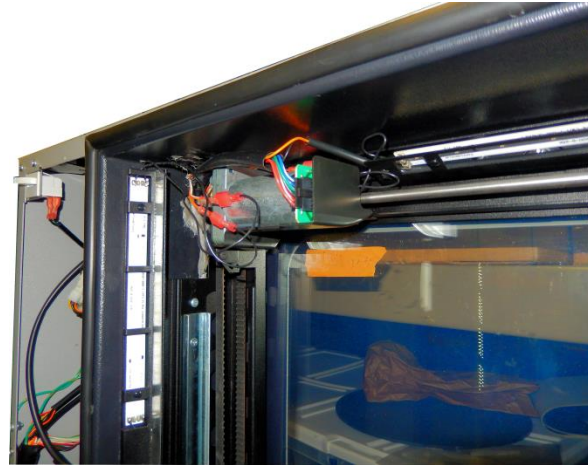

11) Switch machine back ON, close door and allow machine to reset. Take a minimum of 10 test vends to ensure that the iVend system is detecting products 100%.